




INSTALLATION INSTRUCTIONS

Accessory	Application	Publication No.
HEATED GRIPS ATTACHMENT KIT P/N 08T70-MGS-A30	NC700X/XD	MII 13973
		Issue Date
		April 2012

Honda Dealer: Please give a copy of these instructions to your customer.


PARTS LIST

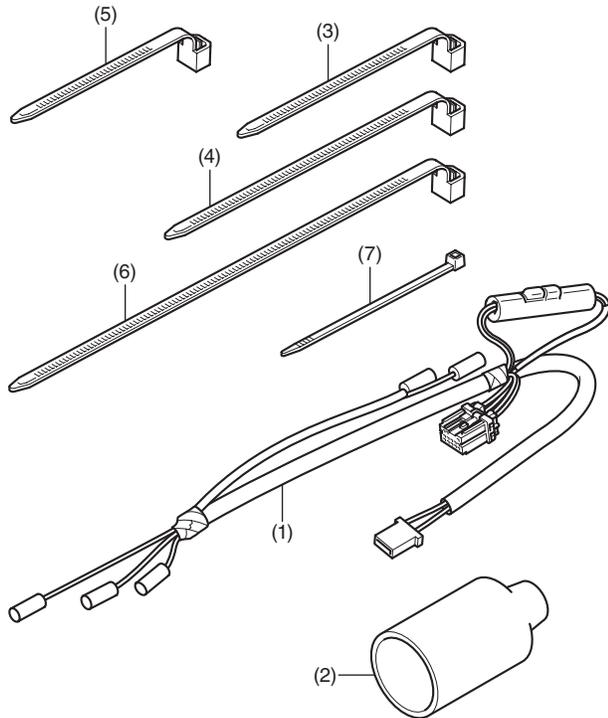

No.	Description	Qty
(1)	Heated grip harness	1
(2)	Harness boot	1
(3)	Wire tie A (W x L: 7 x 125 mm)	3
(4)	Wire tie B (W x L: 7 x 165 mm)	2
(5)	Wire tie C (W x L: 7 x 95 mm)	2
(6)	Wire tie D (W x L: 7 x 235 mm)	2
(7)	Wire tie E (W x L: 2.5 x 100* mm)	2


*: The length is included the wire tie head.

HEATED GRIPS Sold separately

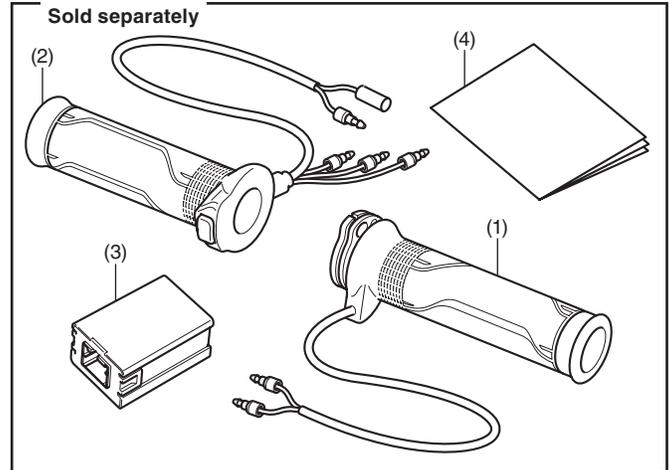


No.	Description	Qty
(1)	Right heated grip	1
(2)	Left heated grip	1
(3)	Controller	1
(4)	Operation Manual	1

SUB HARNESS Sold separately

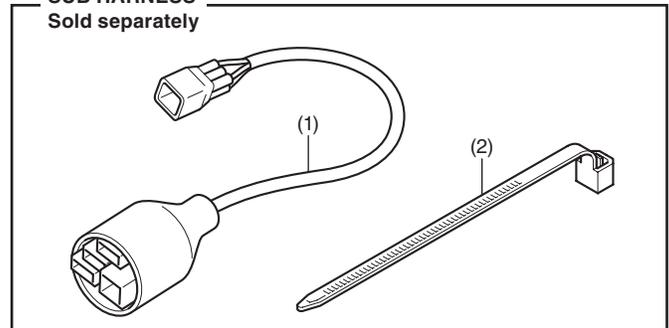

No.	Description	Qty
(1)	Sub harness	1
(2)	Wire tie	1

RELAY SET
Sold separately

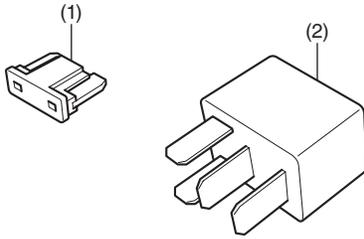

No.	Description	Qty
(1)	Fuse (7.5 A)	1
(2)	Relay	1

TOOLS AND SUPPLIES REQUIRED

Side cutters
Scissors
Ruler
Marker
Electrical tape
Pro Honda Handgrip Cement (08712-0001)
Grease
Thread lock
Isopropyl alcohol
Shop towel

TORQUE INFORMATION

Refer to the Service Manual for the torque values of the removed parts.

USE AND CARE INFORMATION

- Use a 5A fuse for replacement of the fuse in the accessory harness. Do not use any other fuse for replacement.
- Use a 7.5A fuse for replacement of the fuse in the relay set. Do not use any other fuse for replacement.
- Check the accessory mounts frequently.

INSTALLATION INFORMATION

CAUTION:


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:


- The following accessories are also required to install the heated grips.
 - Heated grips
 - Sub harness
 - Relay set
- Disconnect the throttle cables from the right grip as instructed in the motorcycle's Service Manual.
- For secure adhesion of the left heated grip to the handlebar, we urge you to use the recommended adhesive agent (Pro Honda Handgrip Cement or equivalent) and wait until it cures fully before use.
- Be sure to open and close the throttle to check for smooth operation after installation of the right heated grip.
- Take care not to damage the painted surfaces of the motorcycle.
- Reinstall the removed parts on the motorcycle and make sure that wires and harnesses are not pinched.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memory of the clock will be erased when you disconnect the battery. Reset the clock after reconnecting the battery.
- Trim the excess ends off the wire ties after attaching them to the wire harnesses. Do not allow the cut part of the wire tie to interfere with any harness or brake hose.
- After heated grips installation, check the lights (e.g. right / left turn signal lights and brake lights) for proper operation.
- When replacing the Sub Harness or Relay Set, follow the instructions described in these installation instructions.

PREPARING THE RELAY SET


1. Refer to the Service Manual for the motorcycle, remove the maintenance lid, and disconnect the negative (-) cable from the battery.

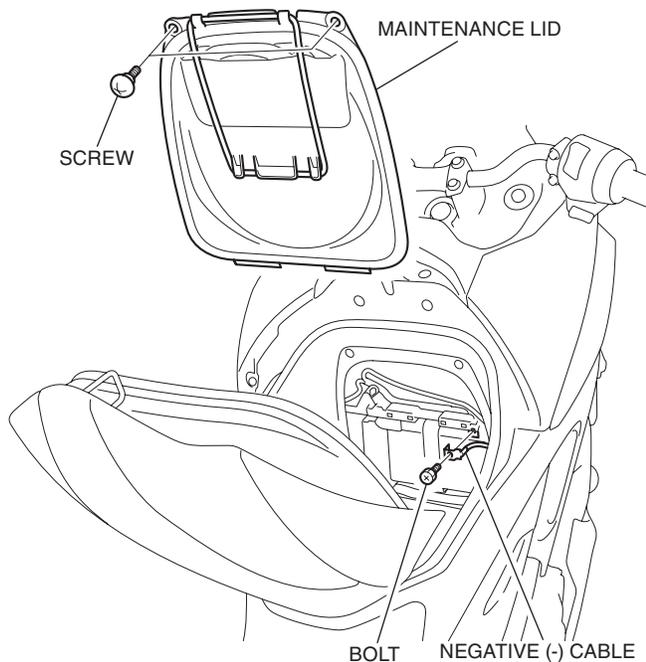

2. Remove the fuse box cover as shown.

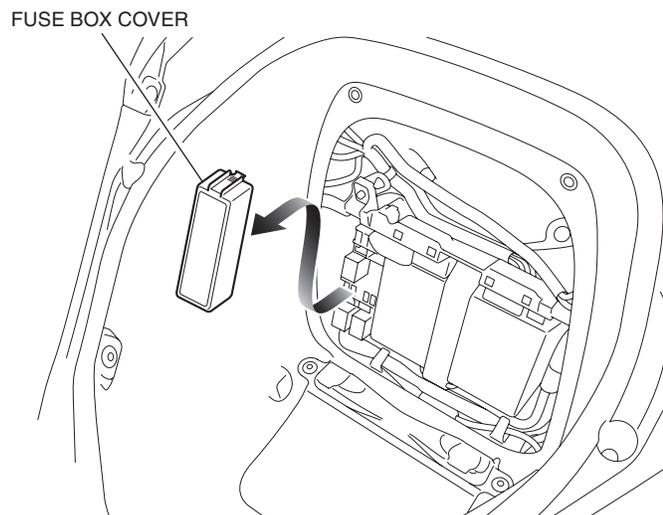


3. Install the relay and fuse in the positions shown.

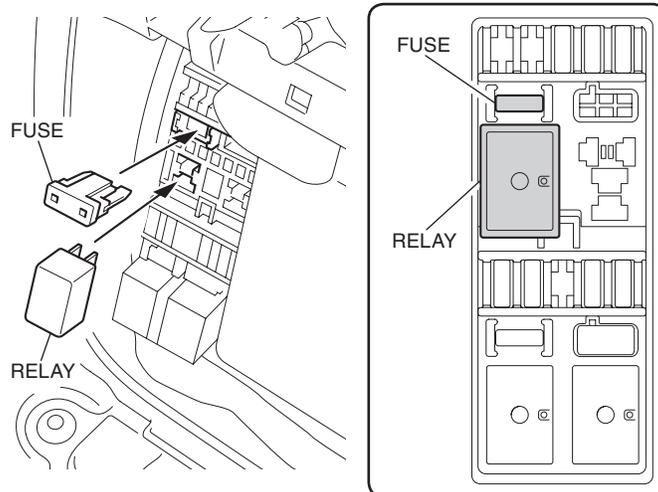


HEATED GRIPS INSTALLATION


1. Confirm the negative (-) cable is disconnected from the battery. See PREPARING THE RELAY SET for detailed instructions.
2. Refer to the Service Manual for the motorcycle, remove the seats.

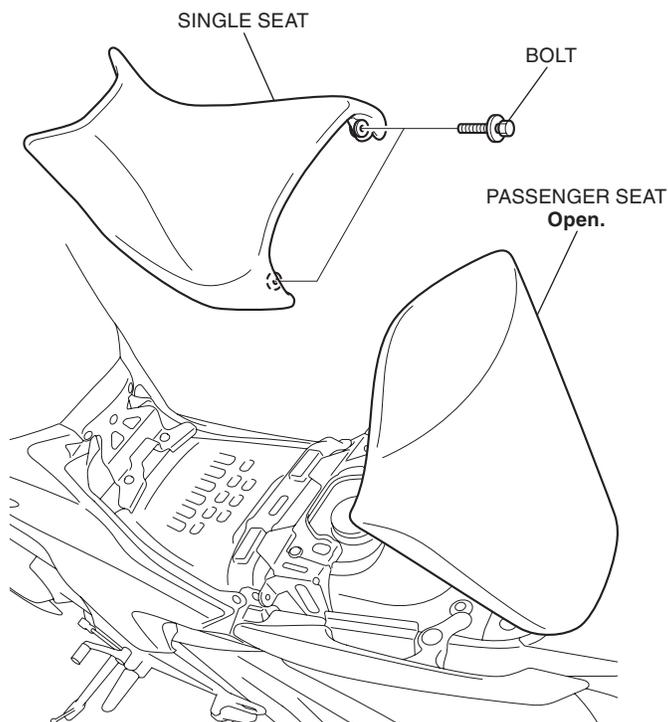


2. Refer to the Service Manual for the motorcycle, remove the left air duct.

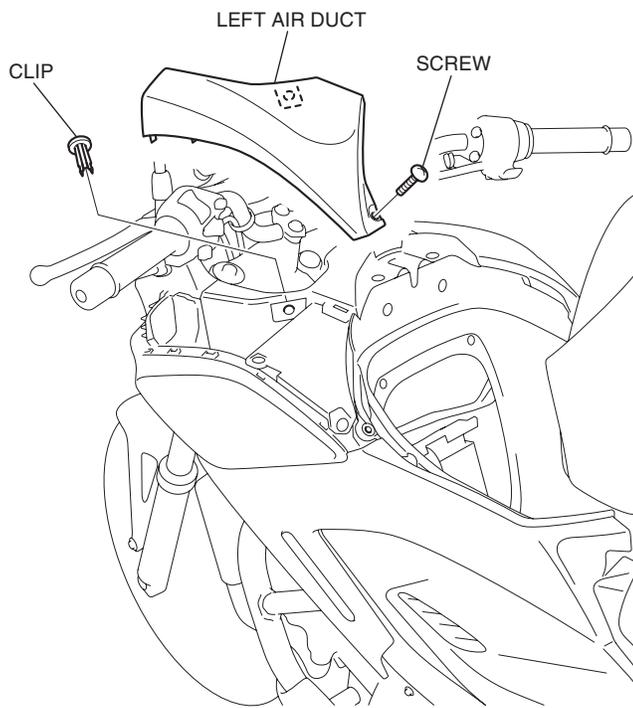


3. Remove the clip and open the front part of the left seat cowl slightly as shown.

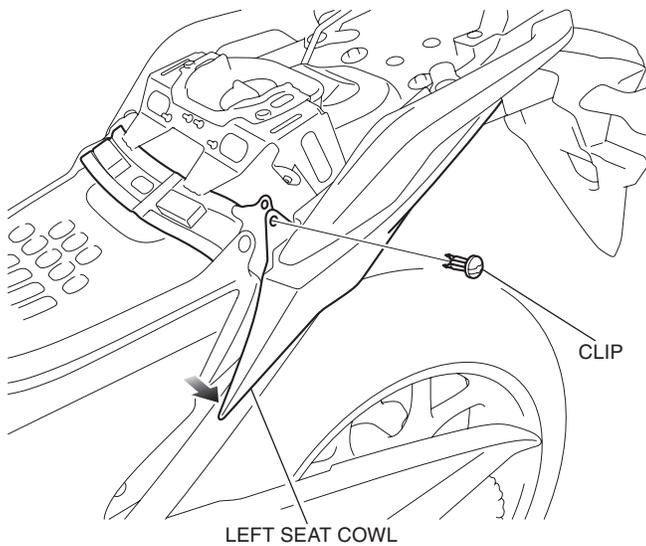


4. Refer to the Service Manual for the motorcycle, remove the left side cover.

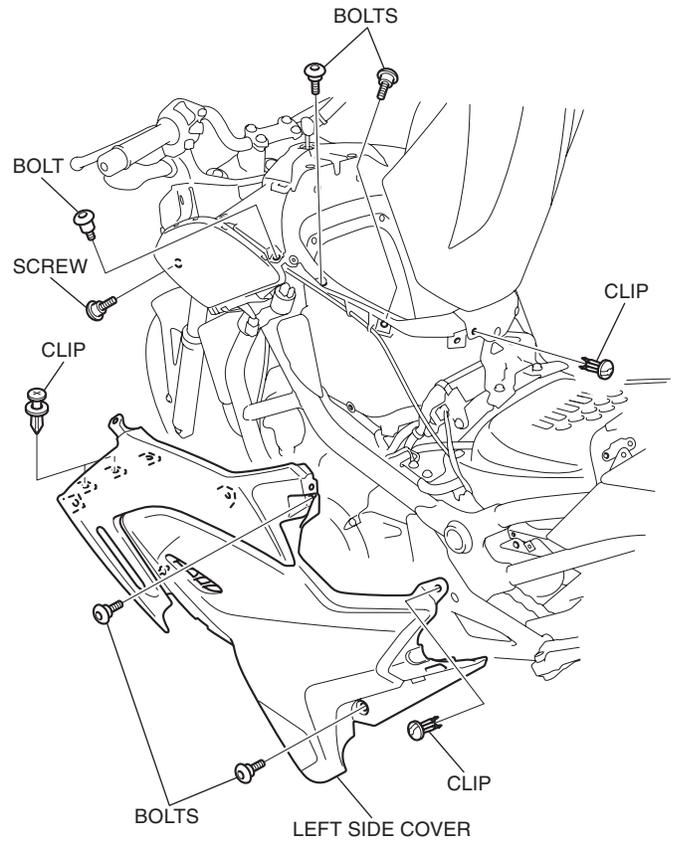

5. Refer to the Service Manual for the motorcycle, remove the left front side cover.

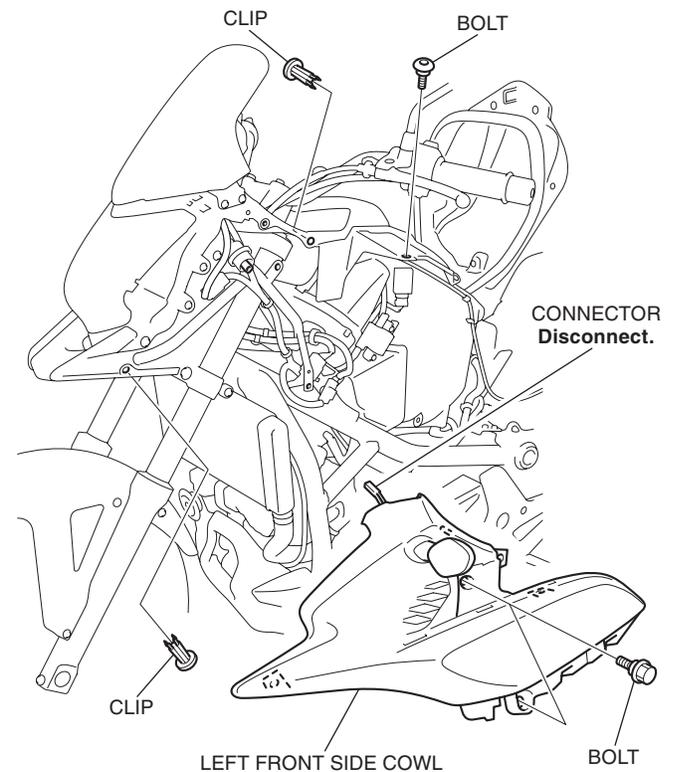


6. Release the motorcycle's 6-pin waterproof connector as shown.

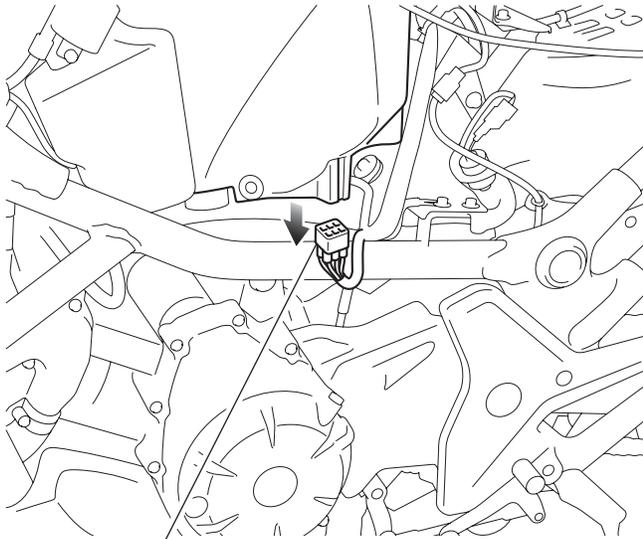

MOTORCYCLE'S 6-PIN WATERPROOF CONNECTOR


7. Connect the sub harness to the motorcycle's harness as shown.

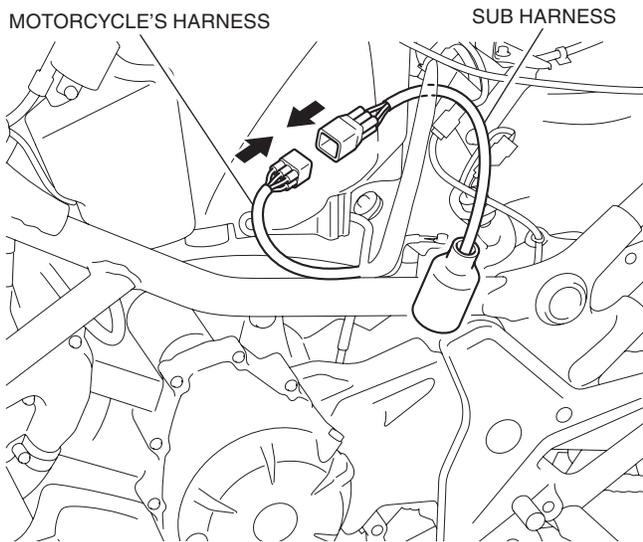

MOTORCYCLE'S HARNESS

SUB HARNESS

8. Secure the 6-pin waterproof connector with electrical tape as shown.

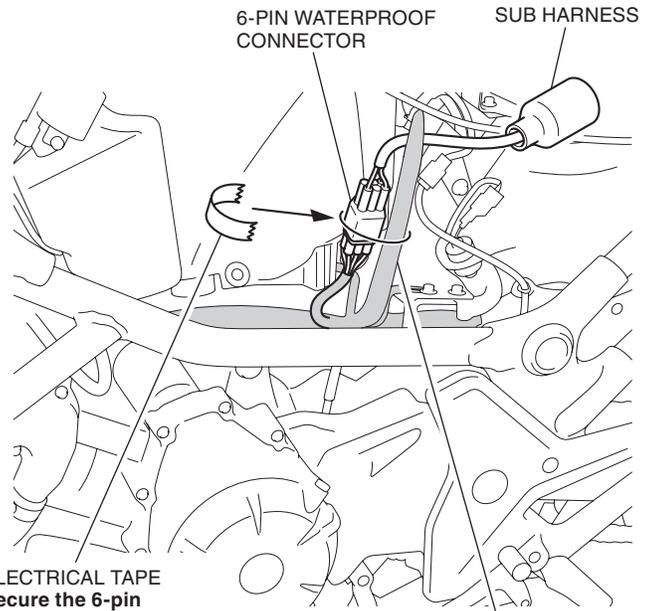


6-PIN WATERPROOF CONNECTOR

SUB HARNESS

ELECTRICAL TAPE
Secure the 6-pin waterproof connector to the motorcycle's harness.

MOTORCYCLE'S HARNESS


9. Connect the controller to the heated grip harness as shown.

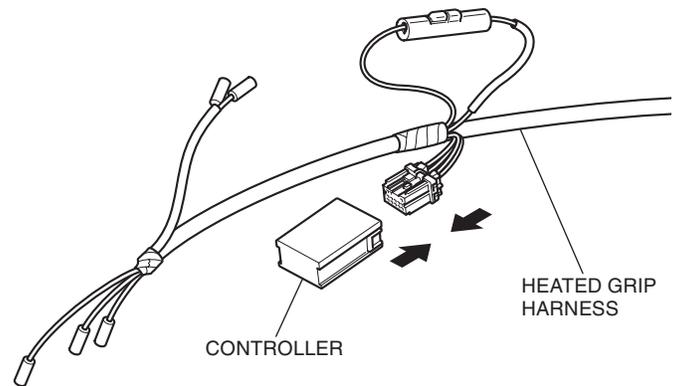

CONTROLLER

HEATED GRIP HARNESS

10. Disconnect the fuse as shown.


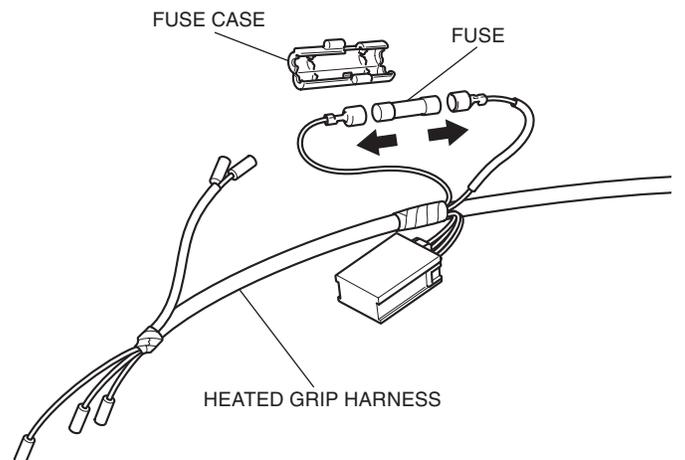


FUSE CASE


FUSE

HEATED GRIP HARNESS


11. Fit the boot over the harness as shown.

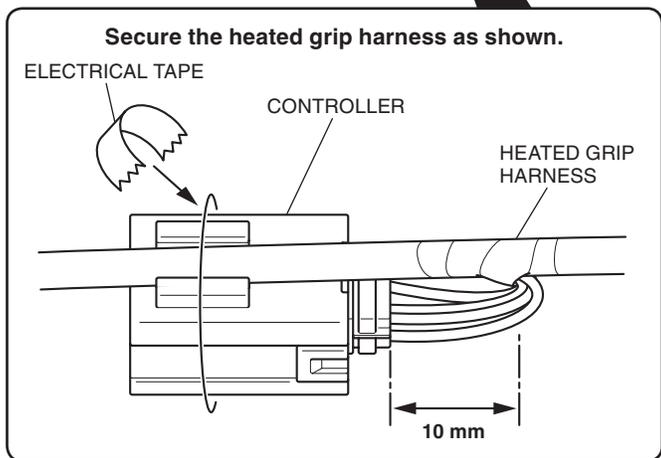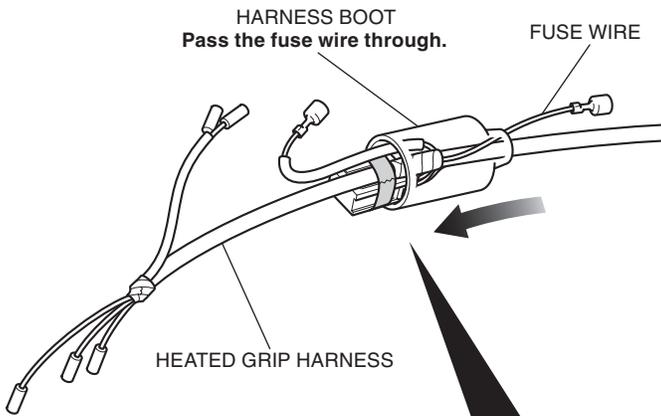


12. Fit the boot over the controller as shown.

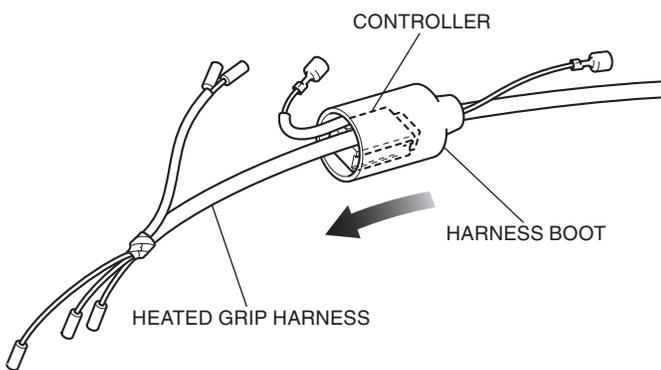


13. Install the fuse in the reverse order of removal.

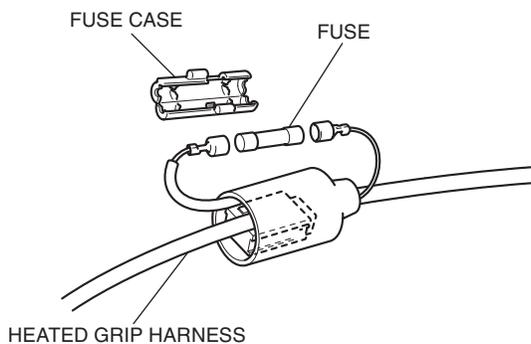


14. Connect the heated grip harness to the sub harness as shown.

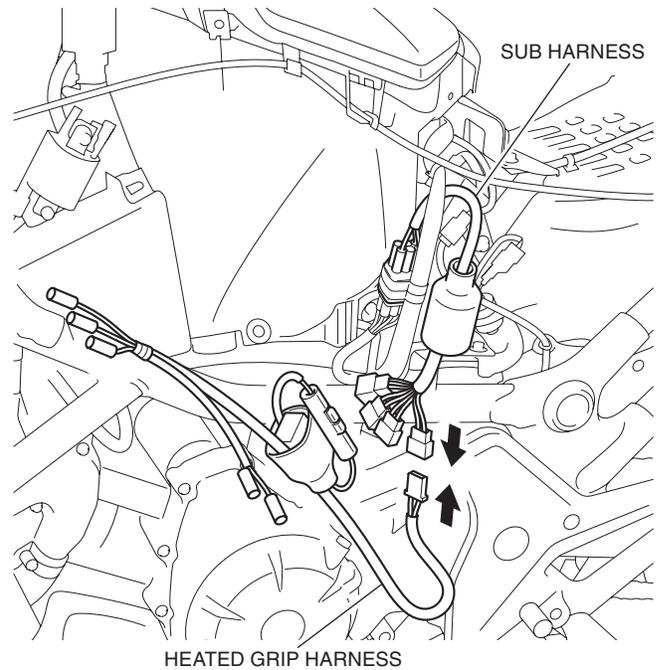


15. Cover the connectors with the harness boot as shown.

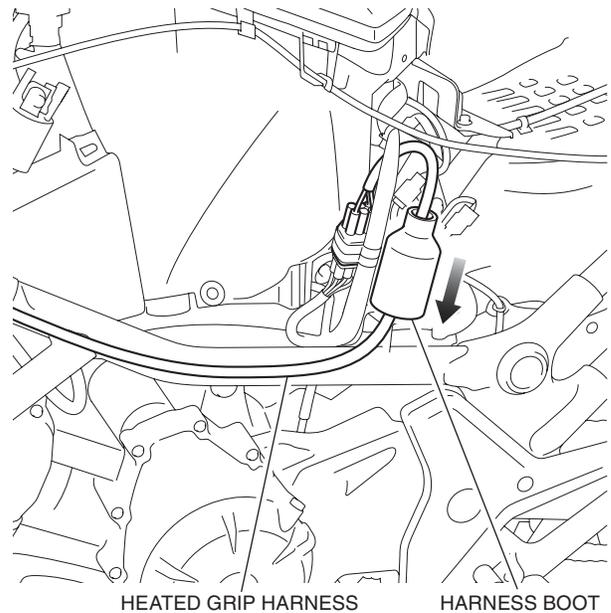

16. Secure the sub harness with the wire tie as shown.

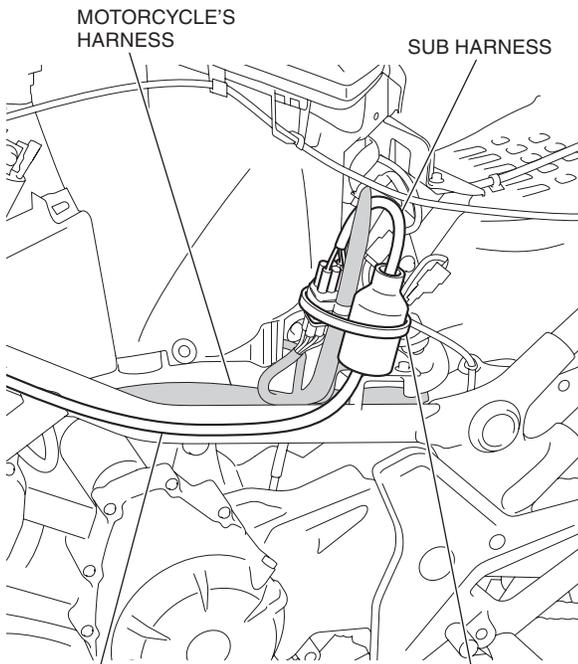

17. Route and secure the heated grip harness with the wire ties as shown.

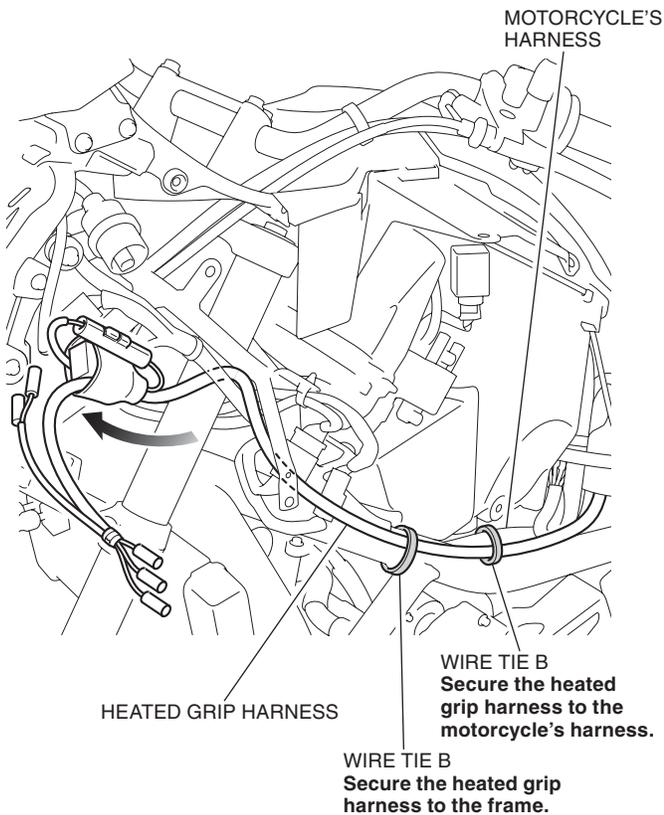

18. Route the heated grip harness as shown.

